


Westcoast-Tbars Alignment Guide

Find the center on the ridge of the nacelle just below the gauges. Line up the top of this guide with the flat part of the ridge.

Lay the guide so that it contours to the nacelle.

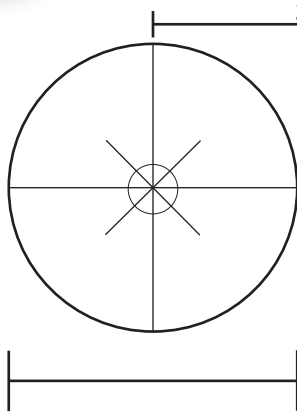


CUT 1.5" HOLE

It is crucial for fitment that the arrow is perfectly in the center of the nacelle between the Gauges.

Center with this line

4.25"

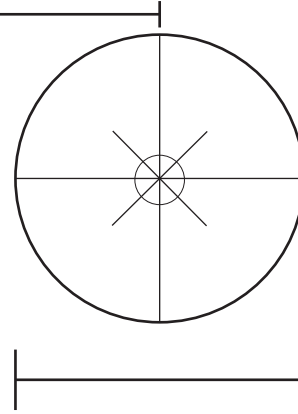

CUT 1.5" HOLE

Important: To print correctly, in print options. Choose Scaling option: Actual Size.

7.25"

**CUT THIS TEMPLATE OUT USING
THE LINE GUIDES**

If there any issues with this guide. Please contact us immediately.

+1-510-316-8381

Thank you